

INSECT KILLER

This insect killer has been designed to lure and kill a range of light sensitive flying insects. The insects are lured by the ultraviolet black light and then killed as they contact the electrically charged inner grid area.



 
Before use please read the safety instructions in this document carefully

IMPORTANT SAFETY INSTRUCTIONS

- **High voltage!** Disconnect power before repairing or cleaning.
- If the power cord is damaged, it must be replaced by a qualified service engineer.
- Never put metal objects inside the grille while in operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Before inserting the plug make sure that the voltage is within the range indicated on the rating label on the appliance.
- The insect killer cannot be used in barns, stables or similar places.
- The insect killer is for **Indoor use only**.
- Disconnect the appliance from the electrical outlet before cleaning the unit or its components.
- When not in use, store out of reach of children.
- The insect killer is not to be used in locations where flammable vapour or explosive dust is likely to exist.
- Never immerse in water/other liquids or use in the immediate vicinity of water, such as bath tubs, washing bowls, swimming pools etc where the likelihood of immersion or splashing could occur.
- This appliance must be earthed.

Operation

- You must first decide on a safe and appropriate position to install the insect killer, make sure you have a socket outlet near enough to the unit. The unit can be wall mounted, suspended from a ceiling or used free standing.
- Screw in a suitable fixing to enable you to hang the unit on a wall or from the ceiling. The fixing should be appropriate for the surface the unit is to be mounted to and strong enough to safely take the weight of the unit.
- Attach the chain provided to the unit by lifting up the 2 metal tabs positioned one on each side at the top of the insect killer. (Carefully turn the unit upside down and the tabs will drop down to enable you to gain access to the mounting holes).
- Hang the unit by its chain, plug in and switch on at the outlet socket and by the switch on the unit.
- The tubes should glow fluorescent violet and start to attract any nearby insects.




Reminder:-

Waste electrical products must not be disposed of with household waste.

This product should be taken to your local recycling centre for safe treatment.

 
MAINTENANCE

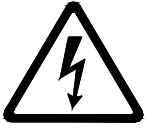

Before any cleaning or maintenance, disconnect the appliance from the wall socket.


If one of the tubes fails to come on, remove the 2 starters on the inside of the unit. (To gain access to the starters the rear outer grille section must be removed by unscrewing the 4 retaining screws). And swap them over. If the opposite tube lights up, then you need to replace the starter. If the same one fails to light up, then you may need to replace the tube.

 Unit shown upside down in images below

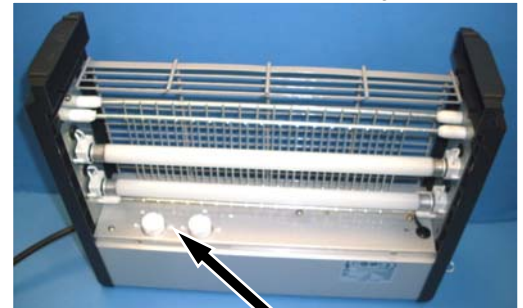

Starter location

 To replace the tube, firstly make sure the unit is switched off and disconnected from the power supply. With the rear grille removed, take hold of the tube that needs replacing and rotate 90° anti-clockwise.

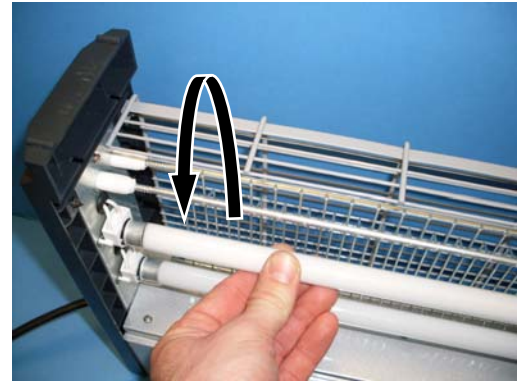

The tube can now be removed vertically out of the locating slot as shown. Replace with new tube, rotate tube 90° in a clockwise direction to lock in place and replace rear grille with the 4 fixing screws.



If both tubes don't come on, it is unlikely that both have failed at the same time and you need to check the fuse to see if it has blown for some reason.

Cleaning

To clean your insect killer, firstly switch off the unit and disconnect from the power supply.

Take the unit down from its hook/fixings and remove the fly tray from the bottom of the unit and clean with soapy water, dry and replace.

If the outer casing and grilles need cleaning, remove the outer grilles completely after unscrewing the 8 retaining screws (Put the screws in a safe place). The grilles can be cleaned in warm soapy water, dried and replaced.

The outer casing can be cleaned using a soft cloth dampened with a kitchen cleaner or degreasant but take care not to get too wet and make sure the unit is thoroughly dry before using.

Supplied by APL